

# Bedienungsanleitung

Bedienungsanleitung


Artikelnummer:

121798

Sprachen:

**en, de**

**Spannzange für Metallbänder**  
Art.-Nr. 121798

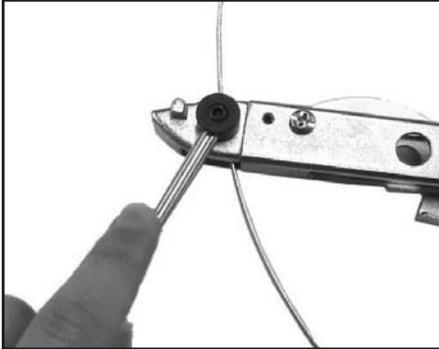

1. Mit geöffnetem Schlitz im Werkzeugkopf und mit dem Schneidhebel im rechten Winkel zum Werkzeug ein genügend langes Stück Band von einer 6 mm oder 10 mm breiten Rolle abschneiden. Das Band durch den Schlitz führen und abschneiden.




2. Eine Schelle formen, indem man das Band durch die Schlaufe führt und darunter verbiegt. Das Schellenende in den Werkzeugkopf einlegen und in den Schlitz des Gewindedorns schieben. Die Verschlussklinke herunterdrücken und die Schelle durch Vorwärtsbewegungen des Ratschenhebels spannen.



3. Bei genügender Spannung den Verschluss ausklinken und das Werkzeug über der Gegenstand rollen. Bitte beachten: Für extra Haltestärke wird doppelte Schlaufung des Bandes empfohlen.



4. Bandende durch Anheben des Schneidhebels abschneiden.

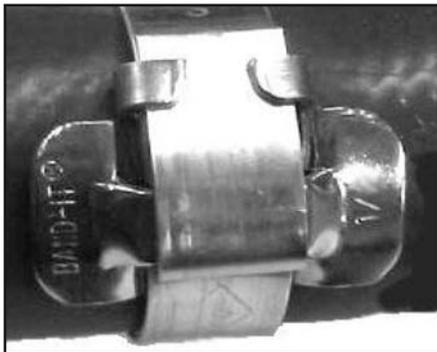

5. Schelle durch Verhämmern der Schlaufenösen fertigstellen. Hierzu kann das Stielende des Ratschenschlüssels benutzt werden.



6. Das um den Gewindedorn verwickelte Band durch Anheben der Verschlussklinke entfernen. Ratschenschlüssel rückwärts drehen und Spannschlüssel vom Werkzeug entfernen.



7. Das Ende der vorgefertigten Schelle in das Werkzeug einführen. Wie unter 2. und 3. spannen. Bei genügender Spannung den Verschluss ausklinken und das Werkzeug über den Gegenstand rollen. Abschneiden, ein Bandende wie oben gezeigt, zurücklassen.




8. Dieses Bandende muss verkürzt werden. Das Werkzeug wird mit geöffneter Schneidvorrichtung über das Bandende gelegt. Das Bandende wird in den Schlitz geschoben und die überflüssige Länge abgeschnitten.



9. Die Schelle wird fertiggestellt, indem man den Rand des Bandes über der Schlaufe verhämmert. Der Ratschenschlüssel wird wie unter 6. gezeigt entfernt.

## Collet Chuck

Art.No. 121798

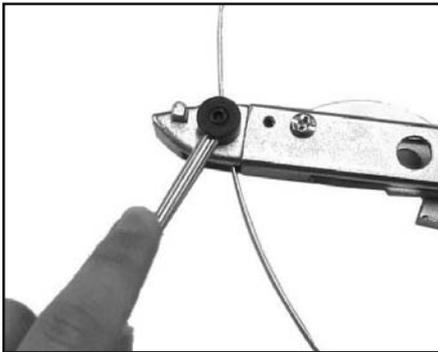

**1.** Cut off adequate band from roll of 1/4" or 3/8" band by opening the slot in the head of the tool with the cut off lever at right angles to the tool. Thread the band through the slot and cut.




**2.** Form a clamp by threading the band through buckle and make a fold under the buckle. Insert tail of clamp into head of tool and slide into slot of winding mandrel. Depress locking pawl and tension clamp with forward strokes of the ratchet wrench.



**3.** When sufficient tension has been applied, release locking pawl and rotate tool over object being clamped. Note: For extra strength double-wrapped band is recommended.



**4.** Cut off excess band by lifting cutter lever.

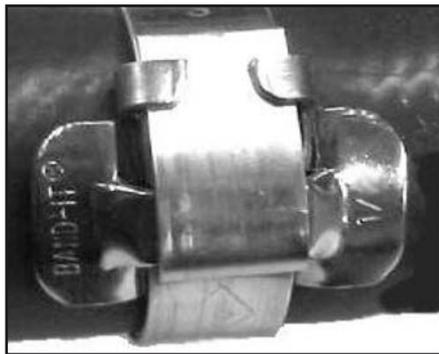

**5.** Complete clamping operation by tapping down ears of buckle with a hammer or mallet.



**6.** Remove band wrapped around winding mandrel by lifting up on locking pawl. Reverse ratchet and withdraw tensioning wrench from tool.




**7.** Insert tail of the preformed clamp into the tool. Tension as shown in steps 2 & 3. When tensioned sufficiently, release locking pawl and rotate over object being clamped. Cut off, leaving stub.



**8.** This stub should be shortened. With cutter in the open position, Place tool over stub, insert into slot and trim off excess.



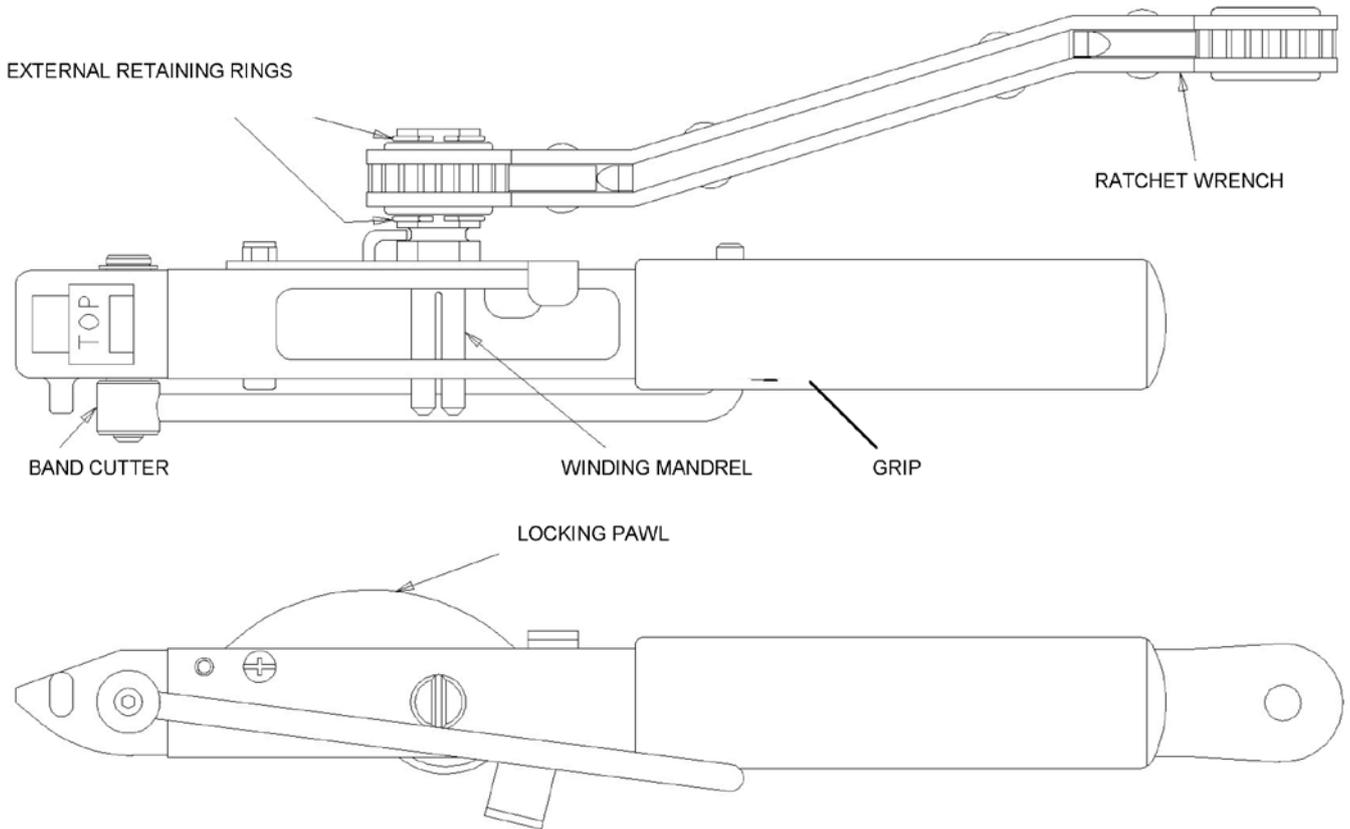

J020 POK-IT TOOL, REPAIR PARTS LIST	
BAND-IT PART #	DESCRIPTION
J02786	MANDREL ASSEMBLY WITH WRENCH INCLUDES: RATCHET WRENCH, WINDING MANDREL AND EXTERNAL RETAINING RINGS
J02587	GRIP
J02488	LOCKING PAWL
J01987	BAND CUTTER

Unless sold without warranty, BAND-IT products are warranted to be free from defective workmanship and/or materials for a period of one year from the date of purchase. Warranty on tools is void if clamps not meeting BAND-IT specifications are used, or if the tool is altered or abused in any manner, including lack of lubrication or used for any purpose in any way not intended by the manufacturer as specifically covered by the instructions accompanying the tool. Specific tool components, such as knives, blades and grippers, which are subjected to normal wear, are excluded from this coverage, as component life depends on usage of the tool. Tools that are repaired or sold as used by BAND-IT are subject to a warranty of 90 days from date of shipment. **NO OTHER WARRANTY OF ANY KIND WHATSOEVER, EITHER ORAL OR WRITTEN, INCLUDING IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER WARRANTY OF QUALITY IS EITHER EXPRESSED OR IMPLIED FOR THE PERFORMANCE OF BAND-IT PRODUCTS. BAND-IT SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, AND/OR CONSEQUENTIAL DAMAGES, EVEN IF BAND-IT HAS BEEN NOTIFIED OF THE POTENTIAL OF SUCH LOSS OR CLAIM. (8/02)**